

*Premier*

מאירים את חייך בכל צעד

מדריך הפעלה



**עיצוב ללא גבולות**

פחות מסגרת, יותר מסך



# INDEX

## GETTING STARTED


|                                             |    |
|---------------------------------------------|----|
| Features.....                               | 5  |
| General components .....                    | 6  |
| Remote control.....                         | 8  |
| Preliminary remote control operations ..... | 10 |
| Main connections.....                       | 11 |

## FUNCTIONS

|                                |    |
|--------------------------------|----|
| Basic operation .....          | 14 |
| Main Menu .....                | 17 |
| First installation.....        | 17 |
| DTV Mode.....                  | 18 |
| ATV Mode and other modes ..... | 26 |
| PC/VGA Mode.....               | 27 |

## REFERENCE

|                              |    |
|------------------------------|----|
| Maintenance.....             | 28 |
| Wall mount.....              | 28 |
| Installation with stand..... | 29 |
| Troubleshooting.....         | 30 |

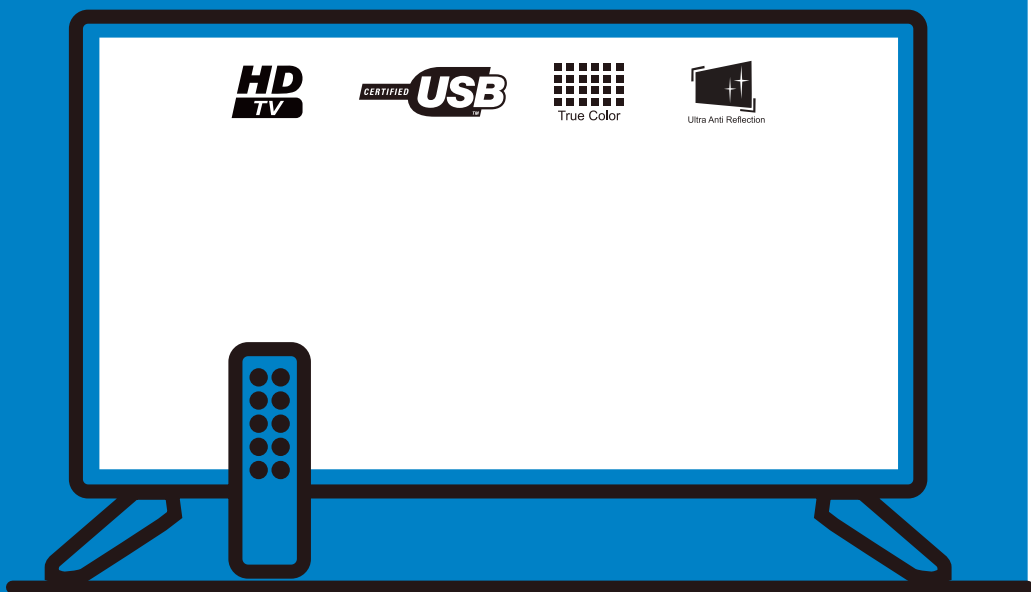

# — FEATURES

## LED TV


The unit is equipped with an integrated LED display to provide a clear view and a low level of radiation.

- Supports TV Automatic Scan
- Supports Teletext function
- Supports Multimedia file playback via USB
- Supports Multi-Language Display on screen
- Supports remote control
- Supports HDMI, AV, VGA, AUDIO PC
- Supports Earphone
- With external antenna jack
- With integrated speakers


# GENERAL COMPONENTS

## Main Unit



Option 1

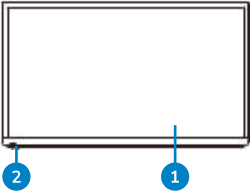

Option 2

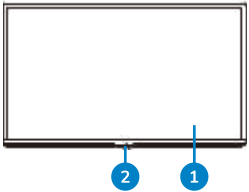


Option 3

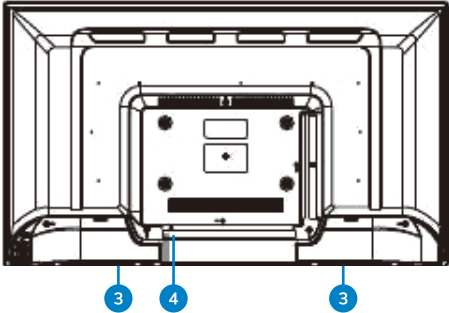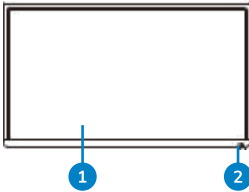

|   |                                   |                                                                                          |
|---|-----------------------------------|------------------------------------------------------------------------------------------|
| 1 | LED Screen                        |                                                                                          |
| 2 | Remote sensor/<br>Power indicator | In Standby mode the light is red; when the unit is switched on, the light is blue color. |
| 3 | Speaker                           |                                                                                          |
| 4 | Power plug input                  |                                                                                          |
| 5 | Standby button                    |                                                                                          |


## Rear View

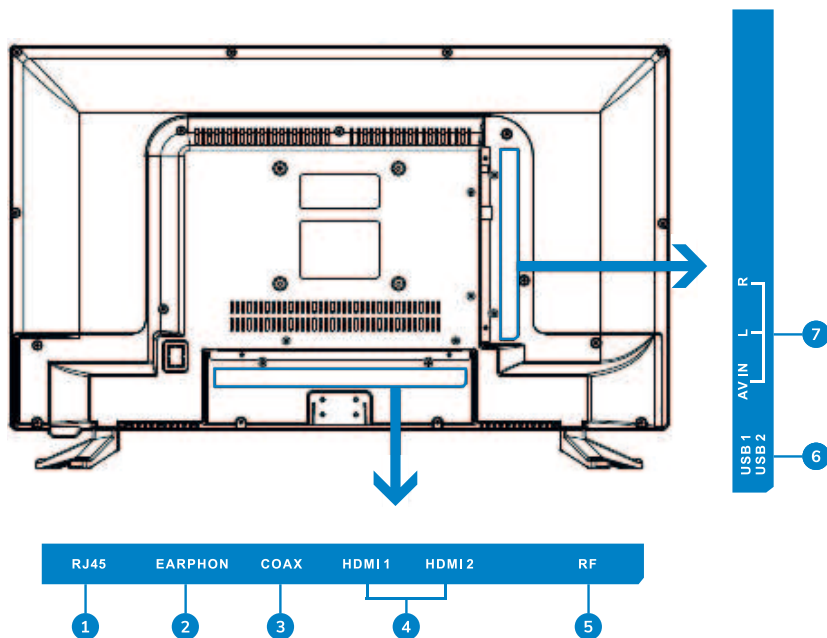

- ❶ **RJ 45** Use to connect the LAN.
- ❷ **EARPHONE** Earphone out interface.
- ❸ **COAX** Video out put
- ❹ **HDMI1 / HDMI2** Receive uncompressed digital audio and video signals from the device that supports High Definition Multi-media Interface.
- ❺ **RF** Connect to RF coaxial cable from analog TV antenna.
- ❻ **USB1 / USB2** Insert the usb disk.

*The location of these connections is subject to change.*

# REMOTE CONTROL

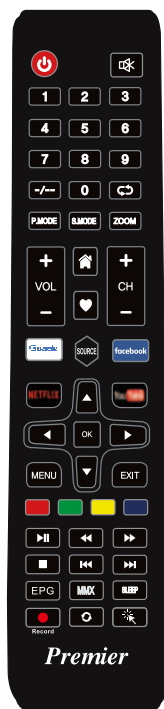

(Pictures are for reference only)

[  ]

Standby turn on and off.

[ 0~9 ]

Continue to press the key to select a channel.

[ EPG ]

Program Guide.

[ VOL+/- ]

Increase or decrease the volume.

[ P.MODE ]

Select picture mode.

[ S.MODE ]

Select sound mode.

[ MENU ]

Enter menu or operation.

[  ]

Switch among the different input signals  
source INPUT

[  ]

The menu item selection.

[ OK ]

Confirm or enter.

[ ASPECT ]

Proportional adjustments.

[  EXIT ]

Exit menu or operation.

[  ]

Favorite show.

[  ]

Press skip to the beginning of the next chapter  
or track.

[  ]

Press to skip forward the storage mode.



# REMOTE CONTROL



(Pictures are for reference only)

## [ Sleep ]

Set the sleep timer.

## [ ● ]

Record.

## [ ◀▶ ]

Press to advance/reverse playback rapidly

## [ ▶▶ ]

Play/Pause.

## [ ■ ]

Stop playing.

## [ SUBTITLE ]

Subtitle.

## [ AUDIO ]

Audio track.

## [ USB ]

USB shortcuts button.

# PRELIMINARY REMOTE CONTROL OPERATIONS

## Installation of batteries

Install the batteries according to what has been illustrated in the following images.

Make sure that the + and - terminals be placed inside the battery compartment according to what has been indicated (Fig.1).

## Useful duration of the batteries

- Normally the batteries last one year, even though their duration depends on the effective use of the remote control.
- If the remote control does not work when it has been placed close to the device, replace the batteries.
- Utilize two dry AAA batteries.

### NOTE

- > Do not drop, step on or hit the remote control in any other way. This might damage the components or cause malfunction.
- > In case of extended inactivity of the remote control, remove the batteries.

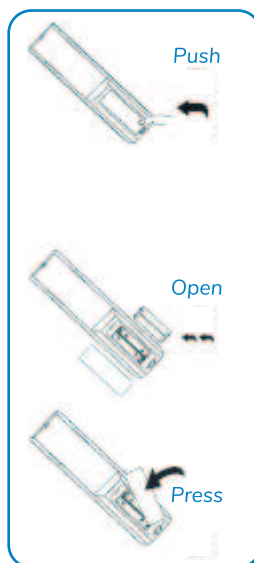


Fig. 1

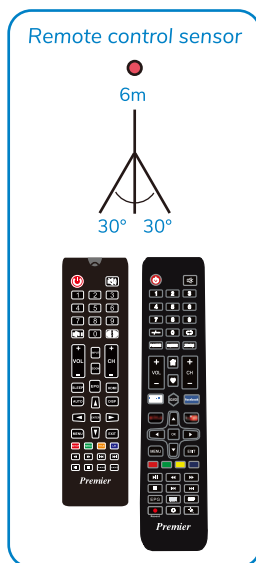


Fig. 2

## Functioning of the remote control

Point the remote control from a distance not farther than 6 m from the remote control Sensor and within a 60° angle Before the device (Fig. 2).

### NOTES:


- The working distance might vary according to the brightness of the environment.
- Do not point light sources towards the remote control sensor.
- Do not place any object between the remote control and the sensor.
- Do not use this remote control if at the same time, you are using the remote control of another device.

# MAIN CONNECTIONS



- Make sure that all cables are disconnected from the main unit before connecting to the AC power source.
- Read carefully the instructions before connecting other devices.


## Connection to an AC power source

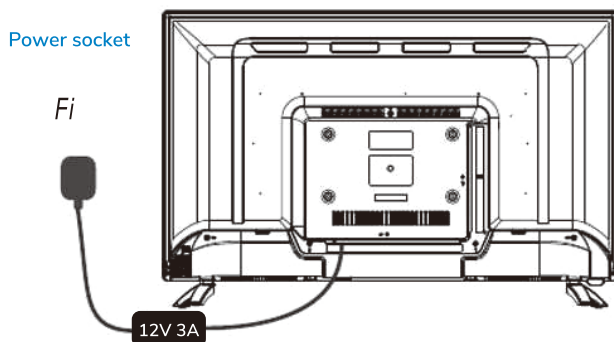


## Connection of the external antenna to the unit

Install an external antenna to the antenna jack for a better image quality.

- 1 Antenna
- 2 Amplifier antenna external
- 3 Amplifier antenna internal
- 4 Antenna amplifier power plug
- 5 Plug antenna 75 OHM

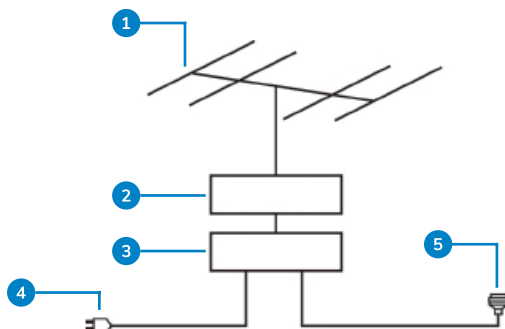


## PC/VGA/USB/Earphone out connection

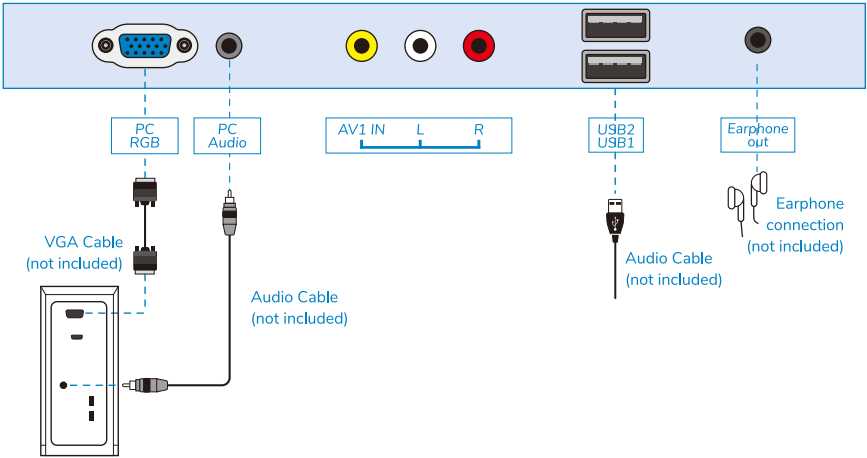


Use a VGA cable and an audio cable to connect the unit to a TV or to a PC, to use it as a screen.

## AV connection (composite video)

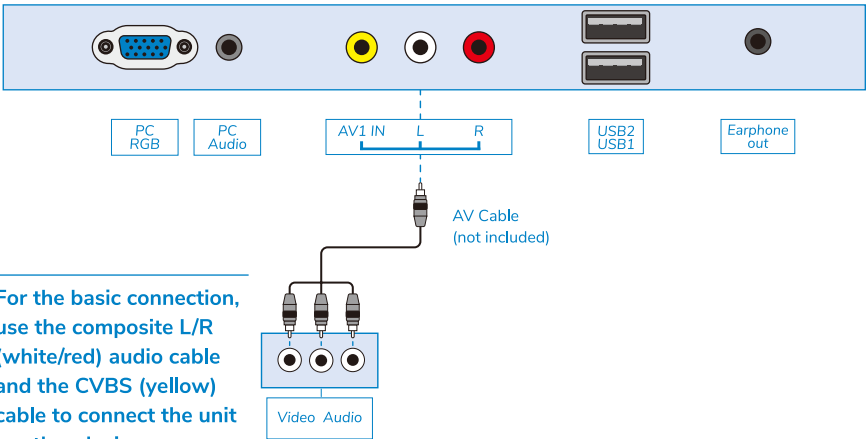

For the basic connection, use the composite L/R (white/red) audio cable and the CVBS (yellow) cable to connect the unit to other devices.

# HDMI/COAX connection

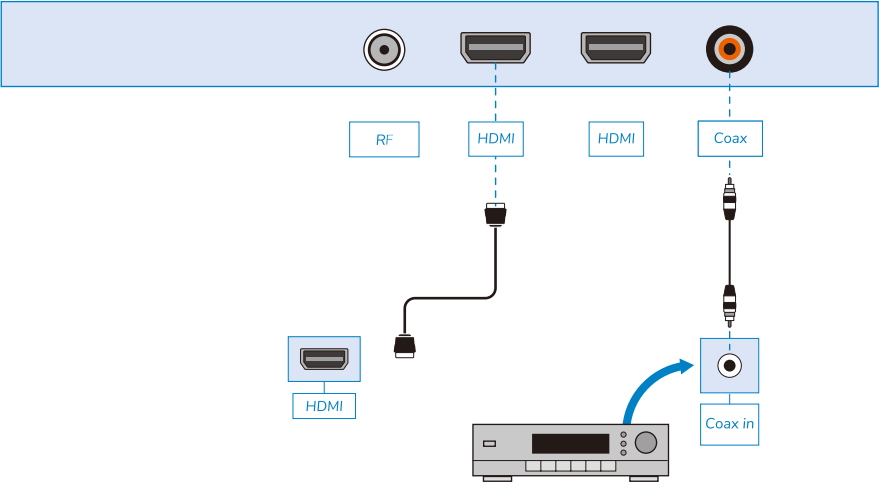

Use a coaxial cable to connect the unit to an amplifier or to another decoding audio device in order to obtain a coaxial output for the audio signal (coaxial cable not included).

*The location of these connections is subject to change.*

# MAIN FUNCTIONS



**Make sure that all devices and power cables are connected correctly and that the unit is set correctly before starting any kind of operation.**

- Press the **POWER** button on the unit or on the remote control to turn on the unit (the light turns blue); press the button again to turn off (standby mode) the unit (the light turns red).
- Press the **INPUT** button on the unit or on the remote control to switch between DTV and ATV mode.

## Selection of the desired program

1. Press the **CH+** button to switch to the following channel.
2. Press the **CH-** button to switch to the previous channel.
3. Press the numbers on the remote control to select directly the desired program.

**NOTE:** press repeatedly the **-/-** button to modify the figures.

## Volume control

Press **VOL+** or **VOL-** to adjust the volume level.  
Available interval: 0-100.

## Mute control

Press the **MUTE** button to deactivate the audio, press again to activate it.


## Source setting

- Press the **INPUT** button on the unit or on the remote control to visualize the list of all sources.
- Press the **▲/▼** button to select the desired input source, then press the **OK** button to confirm the selection. Available options: DTV, ATV, AV, PC, HDMI, MEDIA.

## Favorite list

When viewing DTV digital programs:

- Press the **FAV** button on the remote control to display the Favorites list menu.
- Press the **▲/▼** button to select the desired channel.
- Press the **OK** button to confirm the selection.

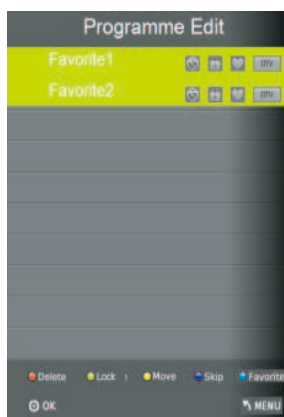

### NOTE

To add / remove a channel from the favorites list, refer to the "channel > program edit" operations.

## Quick selection

When viewing DTV digital programs:

- Press the OK button on the remote control to enter the Channel List menu.
- Press the ▲/▼ button to select the desired channel.
- Press the OK button to confirm the selection.



## TV/Radio (DTV)

- Press the TV / RADIO button on the remote control to switch between TV channels and radio channels (DTV only).

## Subtitle

- Press the SUBTITLE button on the remote control to select the desired subtitles.

Note: To enable this feature, make sure that the displayed channel supports multiple subtitles.

## Teletext

- Press the TEXT button on the remote control to display the available teletext information and press it again to stop displaying the teletext.

## Media playback

- Press the INPUT button on the unit or remote control to set the TV to U mode.
- Insert the USB memory device into the USB slot before performing the following operations.
- Press the ▲/▼/◀/▶ button to move the cursor.
- Press the EXIT button to return to the previous page of the menu.



### 1. Photo

- Press the ◀/▶ button to select PHOTO in the main menu, then confirm by pressing OK button.
- Use the navigation buttons to select the folder or file you want.
- Press the red button to delete the selected file, Yes delete, No to cancel the operation. Use the navigation buttons to select a file and press OK to add it to the playlist.
- Press ▶|| to start playback.
- Press DISPLAY to call up the information bar, use the navigation buttons to select the desired option and press OK button to confirm.
- Press the EXIT button to hide the bar.



## 2. Music

- Press the ◀ / ▶ button to select music from the main menu and press the OK button to enter.
- Use the navigation buttons to select the desired file or folder.
- Press the red button to delete the selected file, Yes delete, No to cancel the operation.
- Use the navigation buttons to select a file and press OK to add it to the playlist.
- Press ▶|| button to start playback.
- Press the navigation buttons to select the preferred option in the toolbar and press the OK button to confirm the selection.
- press EXIT button to return.



## 3. MOVIE

- Press the ◀ / ▶ button to select VIDEO from the main menu, then press OK button to enter the menu.
- Use the navigation buttons to select a file or folder.
- Press the red button to delete the selected file, Yes delete, No to cancel the operation.
- Use the navigation buttons to select a file and press OK button to add it to the playlist.
- Press ▶|| button to start playback.
- Press DISPLAY to call up the bar, use the navigation buttons to select the desired option and press OK button to confirm.
- Press EXIT button to return.



## 4. Text

- Press the ◀ / ▶ button to select TEXT from the main menu, then press OK button to enter the menu.
- Use the navigation buttons to select a file or folder.
- Press the red button to delete the selected file, Yes delete, No to cancel the operation.
- Use the navigation buttons to select a file and press OK button to add it to the playlist.
- Press ▶|| button to start playback.
- Press DISPLAY to call up the bar, use the navigation buttons to select the desired option and press OK button to confirm.
- Press EXIT button to return.



### Remote control operations while playing multimedia files:

- Press the ▶|| button on the remote control to play or pause playback.
- Press the ◀ button on the remote control to stop playback.
- Press the ◀◀ button on the remote control to rewind.
- Press the ▶▶ button on the remote control to fast forward.
- Press the ◀◀ button on the remote control to play the previous file.
- Press the ▶▶ button on the remote control to play the next file.

### NOTE

To play media files, make sure you have selected the correct icon in the MEDIA PLAYBACK main menu. That is, you can only play photo files in the PHOTO item, music files in the MUSIC item, and the like.



# MAIN MENU

## Common procedure for initial settings:

- Press the MENU button on the remote control to display the main menu.
- Use the navigation buttons to move the cursor.
- Press the OK / ► button to enter the submenu.
- Press the MENU button to return to the previous menu.
- Press the EXIT button to exit the menu.

## First Time Installation

- Connect to the power source and turn on the TV, if the TV is turned on for the first time, the First Time Setup menu will appear.
- Press the ▲ / ▼ button to move the selection.
- Press the ◀ / ▶ button to select an option.

**Language:** Select the desired language for the menu.

**Country:** Select the country you are in, if you do not find it in the list, click More.

**Environment:** Select Home or Store mode.

### Tuning setting:



1. After completing the previous selections, press the OK button to display the Tuning Setup menu.
2. Press the ▲ / ▼ button to select the desired Tune type.
3. Press the OK button to confirm the selections and the TV will search for channel automatically.

### NOTE:

- To skip the ATV or DTV tuning, press the MENU button on the remote control to display a dialog box and press OK to skip it; select Cancel to close the dialog box.
- To exit the tuning, press the EXIT button on the remote control to display a dialog box, and select OK to exit the tuning; select Cancel to close the dialog box.

### NOTE

- The unit contains different setup menus. Once you have entered the initial settings, they will remain in memory until changed, and the unit will always work with the same settings.
- The settings will remain in memory until changed, even if in standby mode.

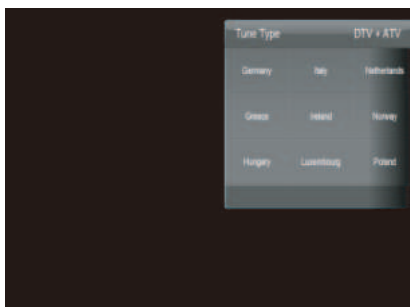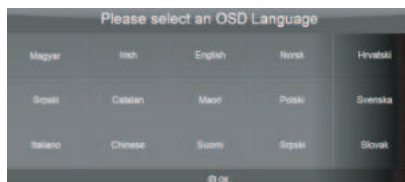

# DTV MODE

Press the TV MENU button on the unit or remote control to select DTV mode.

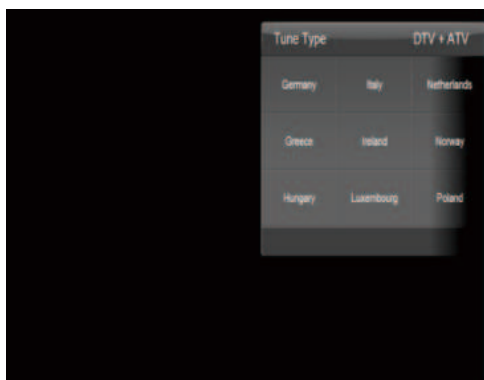
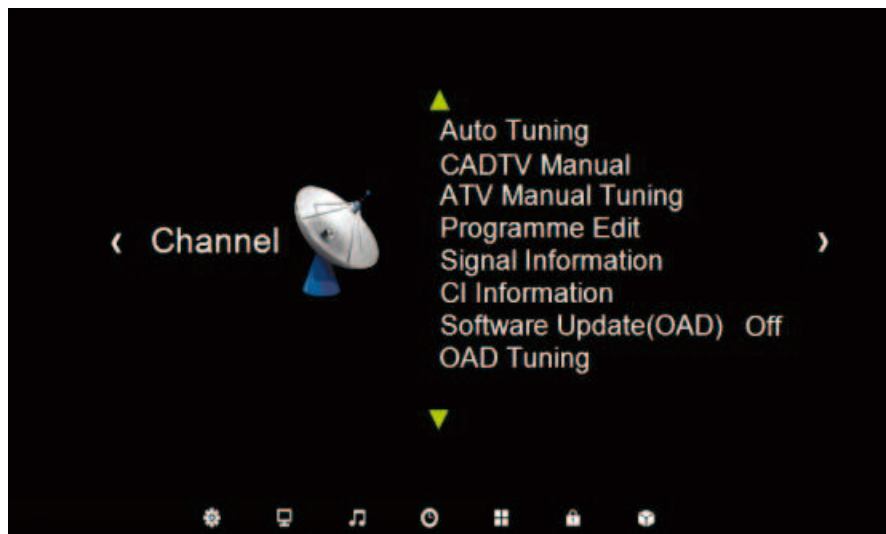


Fig. 1

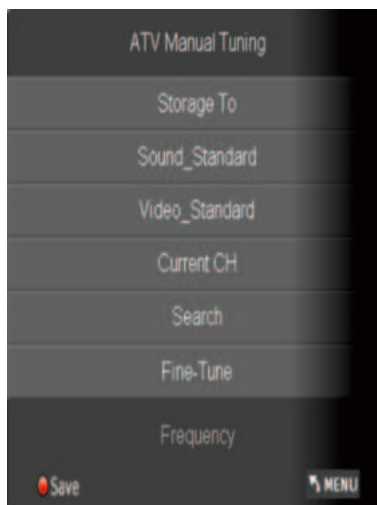


Fig. 2

## 1. Channel

### 1.1 Auto Tuning

- Press the OK button or the right navigation button enter access the submenu.
- Use the navigation buttons to select DVB-T or DVB-C.

### 1.2 Tuning Setup

- Press the OK button or the right navigation button to enter the submenu.
- Use the navigation buttons to set Country, Tune Type, and the following items (Fig. 1).
- Select OK button and confirm to start the automatic search.

### 1.3 ATV Manual Tuning (Only ATV input source)

- Press the OK button or the right navigation button to enter the submenu (Fig. 2).

**Current channel:** to select the current channel.

**Color System:** to select the preferred color system.

**Sound System:** to select the preferred audio system.

**Fine-Tune:** fine tuning of the frequency.

**Search:** Start searching for available channels.

### 1.4 DTV Manual Tuning

- Press the ▲/▼ navigation button to select this item and press the OK button or the ► button to access the submenu.
- Press the ▲/▼ navigation button to select the desired channel number, then press OK button to search. (Fig. 3)

### 1.5 Program Edit

- Press the ▲/▼ navigation button to select Program Edit and press OK button or ► navigation button to access the submenu.
- Press the ▲/▼ navigation button to highlight the desired channel (Fig. 4).
- The three colored buttons are the shortcut button for programming the channel:


- Press the Red button to delete the program in the list.
- Press the Yellow button to move the channel in favorite list.
- Press the Blue button to skip the selected channel.
- Press Fav button to add or remove the channel to your favorite list. (Your TV set will skip the channel automatically when using CH+/- to view the channels)

### 1.6 Signal Information (Only available when there is signal present and the TV is in DTV mode.)

This option is used to display the details of the signal, for example: channel number and signal strength.

### 1.7 CI Information (Only where available)

When a CI Card is inserted and the TV is in DTV mode, the user can view related information or manage the CI Card.

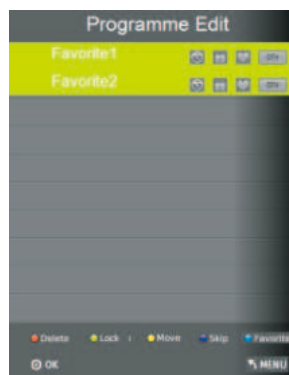

Fi . 4

## 2. Picture

### 2.1 Picture Mode

- Press the ▲/▼/◀/▶ button to select an option.

Available Options: Dynamic, Standard, Mild, Personal.

Brightness / Contrast / Color / Tint / Sharpness: Adjustable Value 0-100.

#### NOTE

The brightness, contrast, sharpness and color value can only be adjusted in Personal mode. Tint is only available for NTSC systems.

**Contrast** - Change the balance between black and white.

**Brightness** - Increase or decrease the brightness of the picture.

**Colour** - Increases the colour saturation.

**Tint** - Lets you increase or decrease the level of tint within the picture.

**Sharpness** - Increase or decrease the sharpness of the picture.

### 2.2 Color temperature

This function is used to adjust the optimum color temperature for the display.

Available Colour Temperature: Cold, Normal, Warm.


### 2.3 Noise Reduction

This function is used to eliminate any picture disturbances.

Available options: Off, Low, Middle, High, Default.

### 2.4 HDMI Mode

HDMI mode can select Auto / Video / PC (Used only in HDMI source).

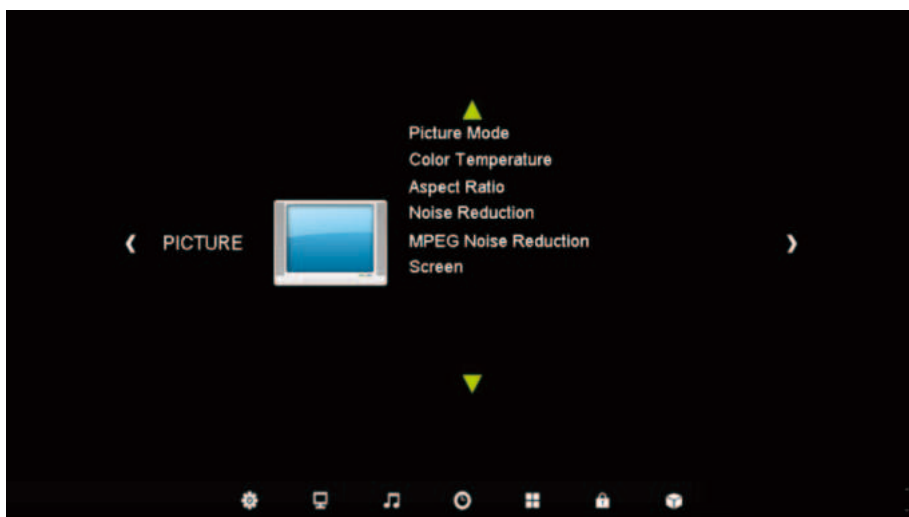

### 3. Sound

#### 3.1 Sound Mode

- Press the ▲/▼/◀/▶ navigation buttons to select an option.

Available Options: Standard, Music, Videos, Sports and Personal. Treble / Basse: adjustable value 0-100.

##### NOTE

The Treble / Bass value can only be adjusted in Personal mode.

**Treble** - To adjust the amount of high frequency within the sound.

**Basse** - To adjust the amount of low frequency within the sound.

#### 3.2 Balance

To adjust the sound between the left and right speakers (adjustable value -50 to 50)

#### 3.2 Auto Volume Level

This option is used to enable / disable the AVL function.

#### 3.3 SPDIF Mode

This option is used to select the desired SPDIF audio output type.

Available Options: Off, PCM, Auto.

#### 3.4 AD Switch (Audio Description)


The A/D function provides extra information about the program for the visually impaired.

For example when the program

has no sound track, this function will explain exactly what is happening on the current screen.

##### NOTE

This function only works if the program has been designed to support it.

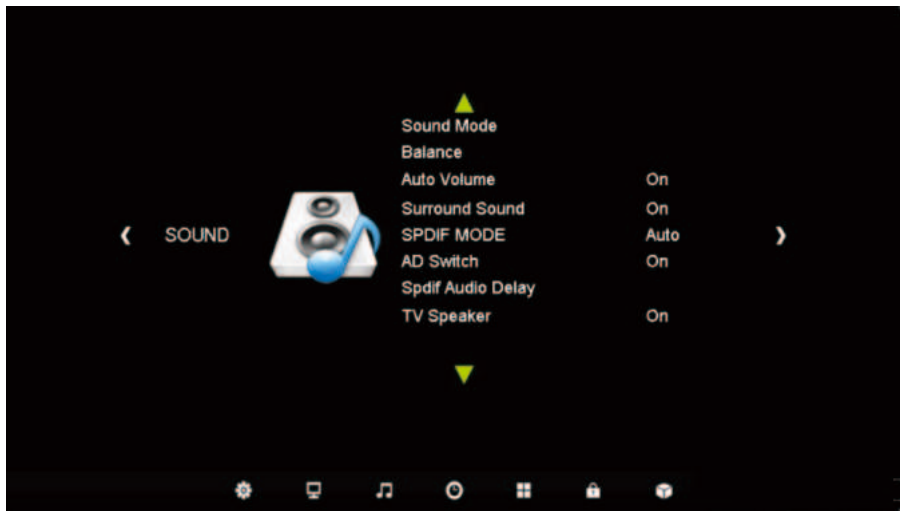

## 4. Time

### 4.1 Clock

When the automatic search is completed, the TV will get the right time and save it automatically.

### 4.2 Time Zone

- Press the OK button or the ► navigation button to enter the submenu and press ▲/▼/◀/▶ navigation buttons to select the desired option.

### 4.3 Sleep Timer

This function is used to set the automatic shutdown time after which the TV goes into standby mode.

Available Options: Off, 10 min, 20 min, 30 min, 60 min, 90 min, 120 min, 180 min, 240 min.

### 4.4 Auto Standby


This function is used to set the automatic shutdown time (power saving) when no function has been performed.

Available Options: Off / 3/4/5 Hours.

### 4.5 OSD Timer

This function is used to set the time of displaying the OSD (On Screen Display) menu.

Available Options: Off / 5/10/15/20/25/30/35 Seconds.

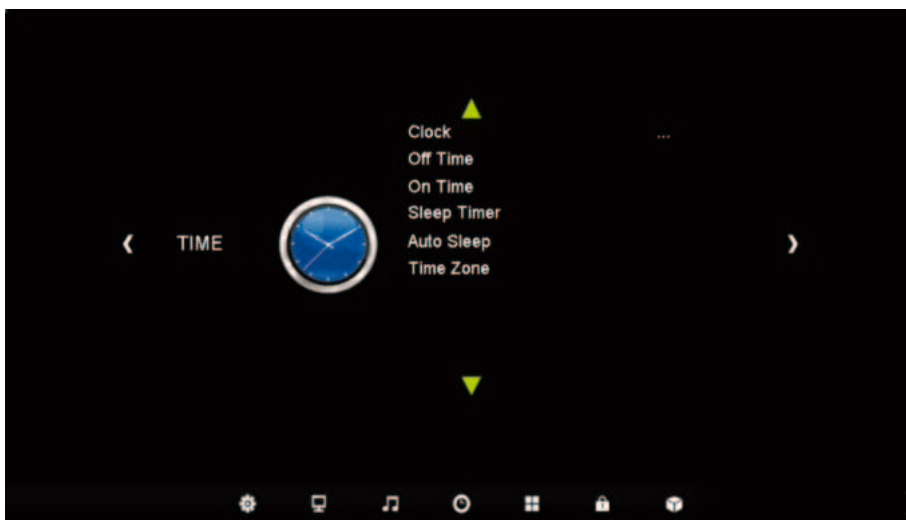

## 5. Lock

- Press the OK or ► navigation button to enter the submenu.
- Enter the initial password "0000" using the numeric buttons on the remote control.
- Press the ▲/▼ navigation buttons to select the item you need.

### 5.1 System Lock

This function is used to enable / disable the system lock.

### 5.2 Set Password

Enter your old password using the number buttons on the remote control and then enter your new password twice.

### 5.3 Channel Lock

- Press the OK or ► navigation button to enter.

- Press the ▲/▼ navigation button to select the channel you want to lock.
- Press the green button repeatedly to lock / unlock the selected channel.

### 5.4 Parental Guidance


- Press the OK or ► navigation button to enter the submenu and press the ▲/▼ navigation button to select the desired viewing level.

Available Options: Off - 4/18.

### 5.5 Key Lock

This function is used to lock / unlock the keys on the rear panel of the TV.

Available Options: On / Off.

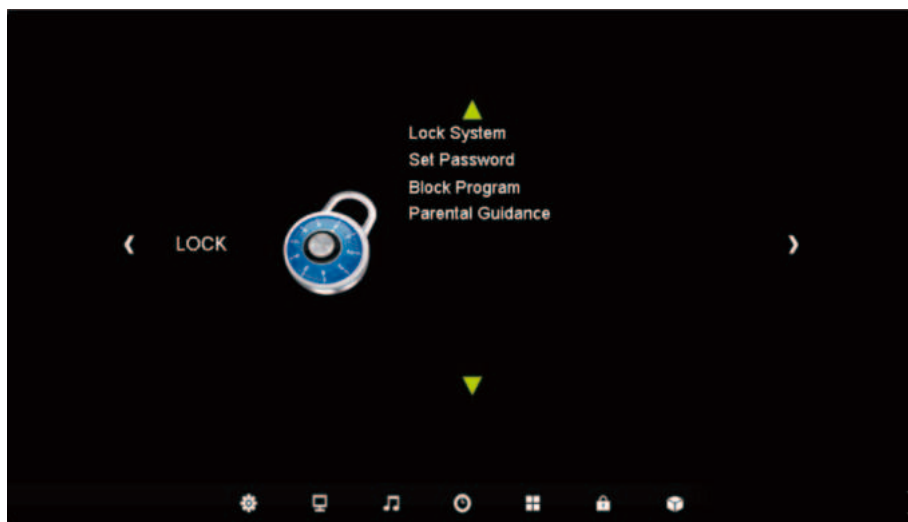

5.6 Hotel Mode  
(This function is recommended for hotel rooms)

- Press the ▲ / ▼ navigation buttons to select the desired item.
- Press the ◀ / ▶ navigation buttons to adjust the value.

**Hotel Mode:** activate / deactivate Hotel mode.

**Source Lock:** activate / deactivate the Lock on available sources.

**Default Source:** select the default source.

**Default Prog:** set the default DTV program.


**Default Volume:** set the default volume.

**Max Volume:** set the maximum volume.

**Import Database:** Importing databases from other devices.

**Export Database:** export database to other devices.

**Clear Lock:** delete the settings for Hotel Mode.

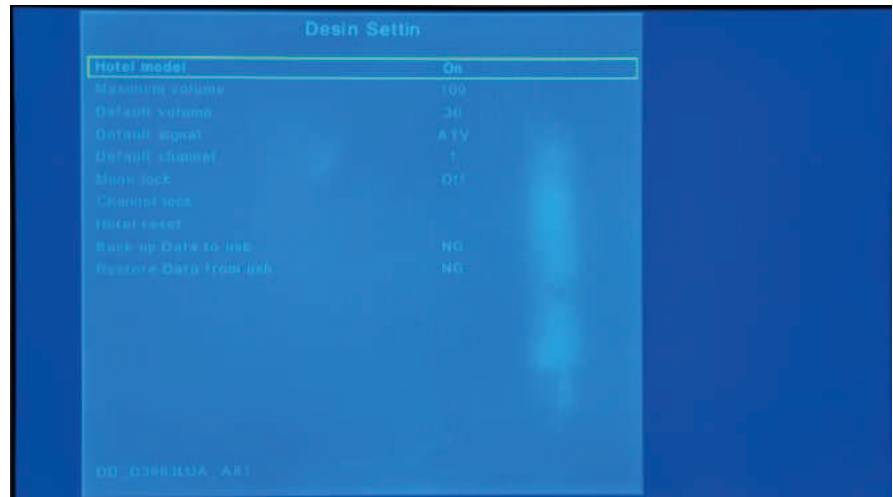



## 6. Setup

### 6.1 Language

Allows you to select the default language of the menu.

### 6.2 TT Language

Allows you to select the default teletext language.

### 6.3 Audio Languages

Allows you to select the Audio Languages.

- Press the ► navigation button to enter submenu.
- Now you can select the primary Audio languages.

### 6.4 Subtitle Language

Allows you to select Subtitle Languages.

- Press the ► navigation button to enter submenu.
- Now you can select the pri-

mary Subtitle Languages.

You can also access this feature directly from the remote control.

### 6.5 Hearing Impaired

Press the ◀ / ► navigation button to select On or Off. The Hearing Impaired function provides extra information about the program for the deaf. For example when the program has no dialogue, this function will explain exactly what is happening on the current screen. This function only works if the program has been designed to support it.

### 6.6 Aspect Ratio

This function is used to change the screen Aspect Ratio.

Available Aspect Ratio options: Auto, 4:3, 16:9, Zoom1, Zoom2.

#### NOTE


The available options may be different for different input sources.

### 6.7 Blue Screen

This item is used to activate / deactivate the blue background function. The screen background becomes blue if the signal is very weak or no signal.

### 6.8 First Time Installation

Select this item: you will enter the first time installation menu.

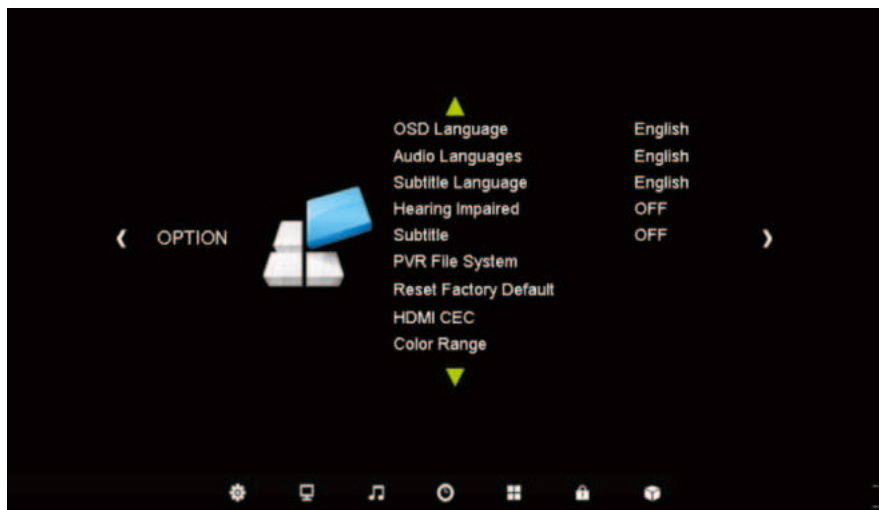

## ATV and other modes

### 6.9 Reset

This function is used to reset the factory default settings.

### 6.10 Software Update (USB)

This function is used to update the TV software using a USB memory device.

### 6.11 Energy

This function is used to select the optimized energy environment mode for House or Shop.

### 6.12 HDMI CEC

Press ▲ / ▼ button to select HDMI CEC, then press OK button to enter the submenu.

**HDMI CEC:** Consumer Electronics Control. Press the ◀ / ▶

button to select On or Off.

**Audio Receiver:** If the HDMI port supports ARC function, the TV will through it return the audio signal back to the amplifier or other audio equipment, so as to save a separate digital output wire.


**Device Auto Power Off:** Press the ◀ / ▶ button to select On or Off.

**TV Auto Power On:** Press the ◀ / ▶ button to select On or Off.

**Device List:** Display the device List which supports CEC.

**Device Menu:** Enables the device to control the menu of another device by passing through user interface commands.

- Press the INPUT button on the unit or remote control to select the source input.
- For these modes, refer to the DTV mode menu operations.

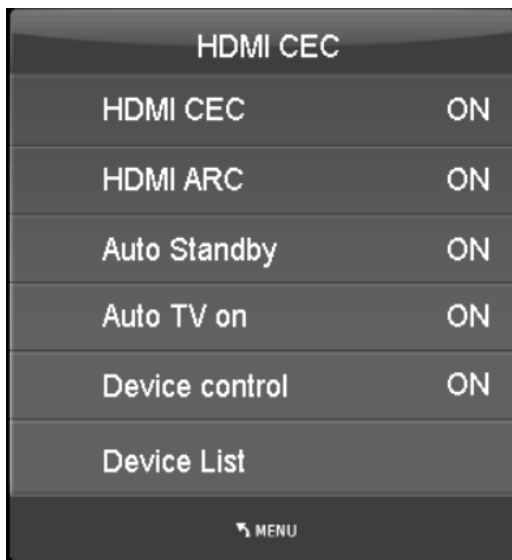

## PC/VGA modes

- Connect a personal computer to this unit via the VGA cable. (Not included)
- Turn on the computer and the unit.
- Press the INPUT button on the unit or remote control to put the unit in PC-RGB (VGA) mode.
- Press the MENU button to display the main menu. Select SCREEN using the ◀ / ▶ navigation buttons.
- Press ▲ / ▼ button to select the option that you want to adjust in the SCREEN menu.
- Press the OK or ▶ navigation buttons to enter the submenu.
- Press the ◀ / ▶ navigation buttons to adjust the value.

### 1. Auto Adjust

Press OK button to start adjusting H-Offset/V-Offset/Size/Phase automatically.

### 2. H-Offset

Adjust the horizontal position of the picture. Press ▲ / ▼ button to select H-Offset, then press OK button to adjust.

### 3. V-Offset

Adjust the vertical position of the picture. Press ▲ / ▼ button to select V-Offset, then press OK button to adjust.

### 4. Size


Adjust the display size. Press ▲ / ▼ button to select Size, then press OK button to adjust.

### 5. Phase

Adjust the horizontal interfering lines. Press ▲ / ▼ button to select Phase, then press OK button to adjust.

### 6. Position Reset

Press ▲ / ▼ button to select Position Reset, then press OK button to adjust

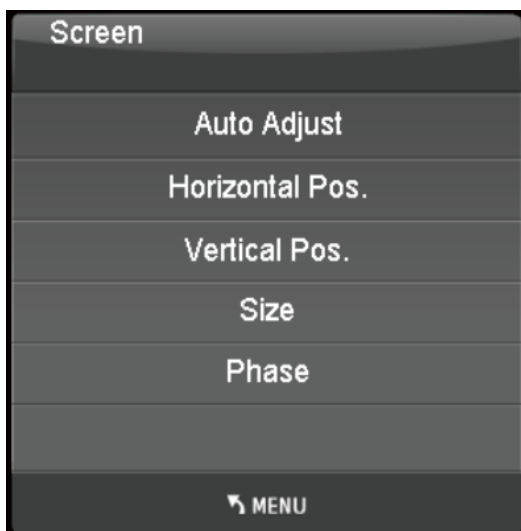

## MAINTENANCE


- Before carrying out any maintenance on the device, press the POWER button to set the device into standby mode and pull the power plug.
- Clean the device with a soft and dry cloth.
- If the surface is very dirty, clean it with a cloth lightly moistened with a solution of soapy water and well wrung, then dry it with a dry cloth.
- Do not use alcohol, benzene, diluting agents, detergents or other chemicals. Do not use compressed air to remove the dust.



## WALL MOUNT INSTALLATION

- Call on an expert for assistance in installing the TV set to the wall. If the user decides to
- Install the TV set by himself, every responsibility in case of product damage or personal injury is denied.
- Do not install the TV set to the wall when it is on. This could cause personal injuries because of electroshock.
- Use standard M6\*10mm screws (4 pieces) to install this TV set.

Back of the TV

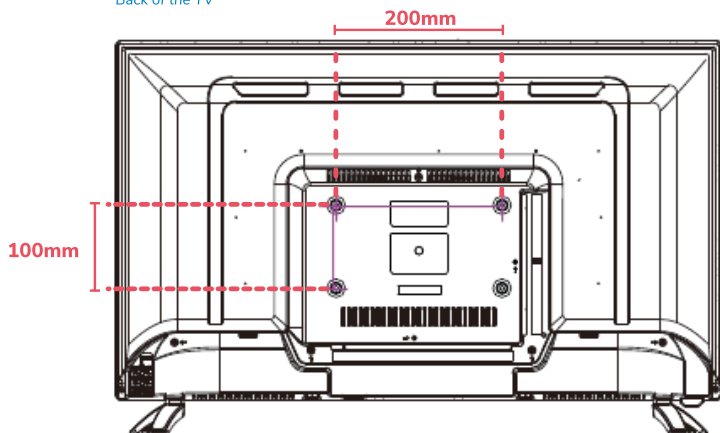

# INSTALLATION

The TV set is packed with separated stand and casing. Before fully enjoying the TV set, follow the installation procedure of the stand, according to the following instructions.

## Phase 1

Place the TV set with its screen facing down on a cloth or a Pillow, in order to avoid damage to the panel.

## Phase 2

Line up the stand with the lower part of the TV and then push the edge of the stand until when the TV has been firmly placed on the stand.


## Phase 3

Fasten the screws with a screwdriver.

### NOTE

- 1) Pull the power plug when you install or remove the Stand
- 2) In order to avoid any damage, request for assistance from one person or more when you install or remove the stand.


1.

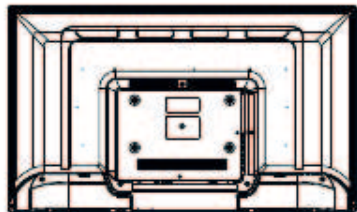

2.



3.

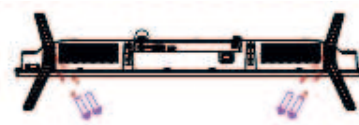

# TROUBLESHOOTING

Verify the following points before you declare the unit defective.

| Symptom [COMMON]                                       | Solution                                                                                                                                                                                                                                                                                                                             |
|--------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Absence of Power.                                      | Firmly insert the power plug into the power socket.                                                                                                                                                                                                                                                                                  |
| No image.                                              | Make sure that the device is connected correctly.                                                                                                                                                                                                                                                                                    |
| No sound.Distorted audio.                              | Make sure that the device is connected correctly.<br>Make sure that the input settings for the TV set and the stereo system are correct.<br>Adjust appropriately the main volume by pressing VOL+/VOL-.                                                                                                                              |
| Cannot activate functions with the remote control.     | Verify that the batteries have been installed with the correct polarity.<br>The batteries are low: replace them with new ones.<br>Put the remote control towards its sensor and try again.<br>Operate the remote control at no more than 6 m away from its sensor.<br>Remove any obstacle between the remote control and its sensor. |
| Buttons do not work (Main unit and/or remote control). | Pull the power plug, then insert it again. (The device might not work correctly because of lightings, static electricity or other factors).                                                                                                                                                                                          |

| Symptom [TV]                   | Solution                                                                                                                                                                                                                         |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No image or low quality.       | Adjust the antenna or use an external one.<br>Place the unit close to a window (if inside a building).<br>Put the product away from units producing interference.<br>Carry out automatic tuning again. Try with another channel. |
| No audio or audio interference | Check your audio settings.<br>Press the MUTE button on the remote control to undo the mute function.<br>Unplug the earphones.                                                                                                    |
| Noise or other interferences.  | Other electric devices close to the unit cause interference.<br>Replace the unit or move the devices away.                                                                                                                       |

*Premier*

## תחנות שירות

### ירושלים

#### מאסטרו רלגוד

בית הדפוס 12 גבעת שאול, ירושלים  
טל': 02-6526521

### אזור מרכז

#### מעבדה ומוקד שירות ארצי

#### אס.ג'י

שקד 19 א.ת. חבל מודיעין, שוהם  
טל': 03-5265112

### חיפה

#### עופר מערכות מעבדות שקד

שד' הסתדרות 2, חיפה  
טל': 04-8224444

### באר שבע

#### אלקטרוניק מרכז התקנות

טרומפלדור יוסף 87, ב"ש  
טל': 08-690-0902

### קריית שמונה

#### אלקטרו פיקס

חיים ארלזורוב 6, ק"ש  
טל': 04-6959430

### אילת

#### עולם הקולנוע

הצורף 1, אילת  
טל': 054-2253911

### נתניה

#### שירות בני

שדרות וייצמן 17, נתניה  
טל': 09-8823408

### עפולה

#### אל חי

הבוכרים 6, עפולה  
טל': 050-5322715



### היבואן: אס.ג'י

שקד 19 א.ת. חבל מודיעין, שוהם  
טל': 03-5265112  
[www.sge.co.il](http://www.sge.co.il)